

Onesie - Sewing Pattern #7126

Recommendations on fabric: knit fabric.

You will also need: 2 buttons or push buttons.

Seam allowances: all seams 0.5 cm.

Tip: In order to make sure that seams don't graze the sensitive skin of the child, you may serge them from the right side.

Tip: You may decorate the garment with embroidery, etc. When sewing for dolls, you may use simpler techniques, for example, use bias tape.

Attention! In case you are making this garment for a doll, please take into consideration the fact that the arms of dolls do not bend. You thus need to enter larger bust circumference in all garments without closure in the center up to the bottom.

Note on seam allowances:

- If the pattern has double contour the seam allowances are included. They are 1 cm unless specified otherwise.

- If the pattern has single contour, the seam allowances are NOT included and need to be added when laying out the pattern.

Note on length of fabric:

Attention! The amount of fabric needed for your pattern is not included. It will depend on the selected pattern size, the width, and design of the fabric you plan to use. First, print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm). Measure how much fabric you will need. Don't forget to account for pieces that need to be cut multiple times and pieces that are cut on the fold.

Note on working with stretchy fabric:

Knitted fabric pieces are sewn together with special elastic or narrow zig-zag stitch. Seam allowance on hems can be stitched with twin needles to save stretchiness. Pieces can also be sewn together with a serger. When serging, cut seam allowances to 0.6 – 0.8 cm.

CUTTING:

Note on cutting:

On the pattern pieces, "beam" means straight of grain. Lay out your pieces accordingly. Some pieces will be



cut on the fold. This is noted on the pattern piece. Mark all notches and other design features such as pleats etc. from the pattern onto your fabric.

When sewing the garment, pay attention to notches, they must match up.

Main fabric:

1. Front - cut 1
2. Back - cut 1
3. Sleeve - cut 2

INSTRUCTIONS:

1. Serge the upper edges of front and back. Fold seam allowances onto wrong side and topstitch with special elastic or narrow zig-zag stitch (in order to prevent threads from tearing when the garment is stretched).
2. Pin together front and back at the level of armhole, placing them in such a way, that the upper back is on top.
3. Sew sleeve into armhole. Serge the seam.
4. Serge the lower edge of sleeve. Fold inside and topstitch, adjusting ease.
5. Sew and serge at the same time side seam and the sleeve seam.
6. Serge the lower edges of front and back in round. Fold seam allowances onto wrong side and topstitch with special elastic or narrow zig-zag stitch.
7. Try on the garment. On front and back chalk out and make buttonholes and sew on buttons or install the push buttons.

TECHNICAL DRAWING:

