

## Dress With Stand Collar - Sewing Pattern #4460

Recommendations on fabric: natural/mixed fabric suitable for dresses.

You will also need: fusible interfacing; dress zipper.


Seam allowances: all seams 1 cm; seam allowance for hem of dress - 2.0 cm.

### Note on seam allowances:

- If the pattern has double contour the seam allowances are included. They are 1 cm unless specified otherwise.
- If the pattern has single contour, the seam allowances are NOT included and need to be added when laying out the pattern.

### Note on length of fabric:

*Attention! The amount of fabric needed for your pattern is not included. It will depend on the selected pattern size, the width, and design of the fabric you plan to use. First, print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm). Measure how much fabric you will need. Don't forget to account for pieces that need to be cut multiple times and pieces that are cut on the fold.*

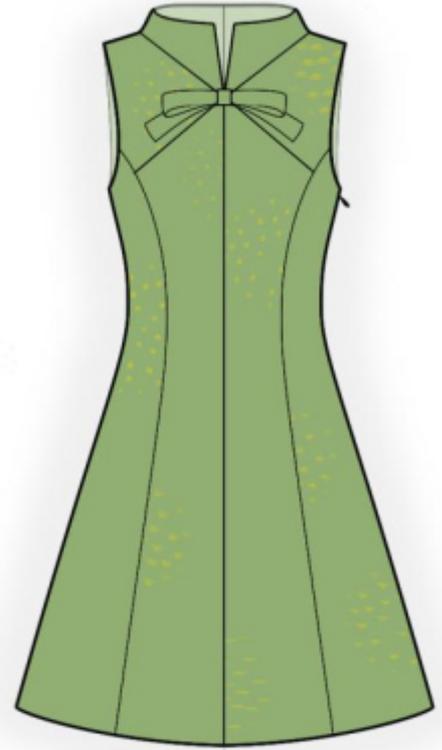

## CUTTING:

### Note on cutting:

*On the pattern pieces, "beam" means straight of grain. Lay out your pieces accordingly. Some pieces will be cut on the fold. This is noted on the pattern piece. Mark all notches and other design features such as pleats etc. from the pattern onto your fabric.*

*When sewing the garment, pay attention to notches, they must match up.*

Main fabric:

1. Center back - cut 2
2. Side back - cut 2
3. Center front - cut 2
4. Side front - cut 2
5. Back collar - cut 4
6. Front collar - cut 4
7. Front yoke - cut 2

Fusible interfacing:

1. Back collar - cut 2
2. Front collar - cut 2

## **INSTRUCTIONS:**

1. Apply fusible interfacing to upper collars.
2. Sew upper collar to back. Press towards collar. Sew center back seam. Serge seam and press towards left. Sew side backs to center back. Serge seams and press towards center.
3. Sew upper front collar to front yoke. Press towards collar. Sew front yoke to front. Serge and press towards top. Sew side fronts to front. Serge seams and press towards center.
4. Sew shoulder seams, sewing the stand collar seam at the same time. Serge seam allowances on shoulder seam. Clip into seam allowances on collar and press apart.
5. Cut or use ready-made bias tape, its width should equal 4 cm and length should equal the length of armhole + 5 cm. Fold bias tape in half lengthwise right side out and press. Pin bias tape to armhole edge from the right side and sew. Clip into seam allowances. Fold bias tape onto wrong side and topstitch onto main piece along the seam. Press seam.
6. Sew right side edges, press seams towards back and serge. Serge left side edges separately on each piece, sew from notch to bottom, press apart. Sew in zipper.
7. Sew shoulder seams and center seam of inner collars. Press seam apart. Serge lower edge. Pin inner collars onto neckline and sew along upper edge and front part of front. Clip seam allowances and fold onto wrong side. Press upper edge. Stitch-in-the-ditch seam allowance of inner collars along seam of upper collars.
8. Fold bow right sides together and sew three edges, leaving an opening for turning. Trim away corners, turn right side out bow and press. Sew the opening closed by hand. Cut strap 6 at 6 cm. Sew one side and turn right side out. Insert bow into strap and sew to dress, according to technical drawing.
9. Serge lower edge of dress, press onto wrong side and topstitch or hem as desired.

## **TECHNICAL DRAWING:**

