

## Sewing Pattern — Dress 4241

Recommendations on fabric: well draping fabrics suitable for dresses

You will also need: blind zipper, fusing.


If the pattern has double contour the seam allowances are included.

Seam allowances are NOT included by default and need to be added when laying out and cutting details if your pattern has single contour.

Seam allowance: on hem of the dress – 2.0 cm; along vent – 6 cm; along the edge of sleeve – 1.5 cm; all other seams – 1 cm.

**Attention!** First of all please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need. Don't forget to count pair parts and symmetrical parts.

When sewing the garment, pay attention to notches, they must coincide.

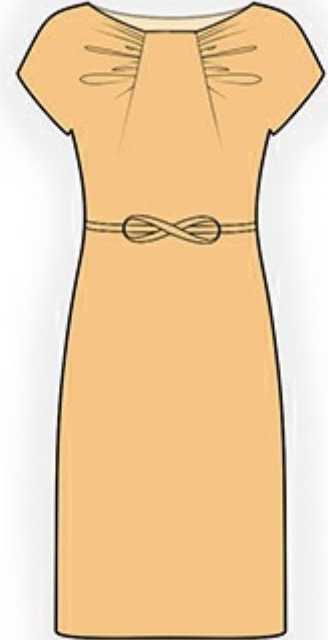

### **CUTTING:**

Main fabric:

1. Back part - 2 details
2. Front part - 1 folded detail
3. Front neckline facing - 1 detail
4. Back neckline facing - 2 details

Fusing: back part neckline facings, front part neckline facing

### **INSTRUCTIONS:**

1. Apply fusing to details.
2. Sew darts on details of back part. Press darts towards center of details .
3. Cut off 5 cm on left back part along vertical edge of the vent. Apply fusing to wrong side of the vent on both details of back part. Mark center seam line on right side (vent foldline). Press left part along vent foldline, on right part press only seam allowance of right side of the vent (6 cm) onto wrong side . Align details according to center seam and fix along top edge of the vent. Serge center edge of back part separately on each detail . Serge seam allowances of the vent. Sew center edge of back part from closure marker up to vent corner. Slash away vent seam allowance corner on right part. Press seam allowances of center seam apart, press seam allowances of the vent and fix them along right side with machine stitch. Sew zipper in.

4. Stitch loosely and gather ruffles on front part along dart edge from marker up to neckline. Sew the dart. Press the dart towards center.
5. Sew shoulder and side edges. Serge seams and press towards back part.
6. Sew shoulder edge of the facings. Serge and press to front part. Serge outer edge of the facings. Fold dress with facing right sides touching, leveling neckline edges. Turn the facing apart, leaving 5 mm to zipper edges and pin to top edge of the dress. Turn seam allowances along zipper onto right side of the dress and pin to neckline edge on top of facing. Overstitch neckline edge. Slash seam on rounded parts, turn details out and press. Topstitch facing seam allowances. Tack facing to zipper tape.
7. Serge hem of sleeve. Turn seam allowance inside and topstitch.
8. Serge hem of the dress and press inwards. Undersew with invisible stitches. Wear the dress with the belt.

### **TECHNICAL DRAWING:**

