

Sarafan With Buckles - Sewing Pattern #2051

Recommendations on fabric: thick natural/mixed suiting fabrics.

You will also need: fusible interfacing; dress zipper; 2 buckles.


Seam allowances: all seams 1 cm. Seam allowance for hem of garment – 3.0 cm.

Note on seam allowances:

- If the pattern has double contour the seam allowances are included. They are 1 cm unless specified otherwise.
- If the pattern has single contour, the seam allowances are NOT included and need to be added when laying out the pattern.

Note on length of fabric:

Attention! The amount of fabric needed for your pattern is not included. It will depend on the selected pattern size, the width, and design of the fabric you plan to use. First, print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm). Measure how much fabric you will need. Don't forget to account for pieces that need to be cut multiple times and pieces that are cut on the fold.

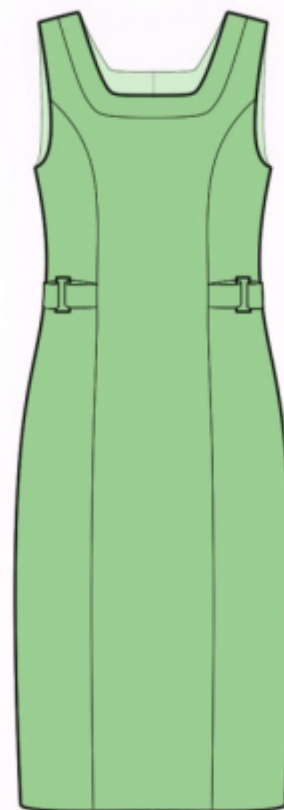

CUTTING:

Note on cutting:

On the pattern pieces, "beam" means straight of grain. Lay out your pieces accordingly. Some pieces will be cut on the fold. This is noted on the pattern piece. Mark all notches and other design features such as pleats etc. from the pattern onto your fabric.

When sewing the garment, pay attention to notches, they must match up.

Main fabric:

1. Center back – cut 2
2. Side back – cut 2
3. Side front – cut 2
4. Center front – cut 1 on fold
5. Back neck facing – cut 4
6. Front neck facing – cut 2
7. Strap – cut 4

Fusible interfacing:

1. Back neck facing – cut 2
2. Front neck facing – cut 1

INSTRUCTIONS:

1. Apply fusible interfacing.
2. Sew back neckline facing to back, press seam allowances towards placket. Sew front neckline facing to facing, press seam allowances towards placket.
3. Pin together strap in half lengthwise right sides together and sew along longer edge. Strap turn right side out and press. Thread straps into buckle. Slipstitch ends of straps. Adjust the length of straps with buckles.
4. Serge center back edges separately. Align pieces along center seam and baste together along upper edge of vent. Serge seam allowances of vent. Sew center back seam from zipper marker down to vent corner. Clip into seam allowance of vent in corner on right part. Press apart center seam, press seam allowances of the vent and sew them together by machine. Sew in zipper.
5. Sew side fronts to front, inserting straps, press towards center and serge.
6. Sew side backs to center back, inserting straps, press towards center and serge.
7. Sew side and shoulder seams, press towards the back and serge.
8. Sew shoulder seams on inner facings, press the seam apart. Serge the outer edge. Pin facings to garment right sides together and sew the neckline. Clip seam allowances, fold facing onto wrong side and stitch-in-the-ditch along seam of outer facing.
9. Cut (or take ready) bias tape, its width should equal 4 cm and length should equal the length of armhole + 6 cm. Fold bias tape in half lengthwise right side out and press. Pin bias tape to armhole edge from the right side and sew. Fold bias tape onto wrong side, clip into seam allowances and topstitch onto main piece along the seam. Press seam.
10. Serge bottom edge of dress, press onto wrong side and topstitch.

TECHNICAL DRAWING:

