

## Jeans With Decorative Closure - Sewing Pattern #2244

Recommendations on fabric: natural/mixed denim (jeans fabric).

You will also need: lining; fusible interfacing; 6 shank buttons.


Seam allowances: all seams 1 cm, seam allowance for hem 5 cm, upper seam allowance of back pocket – 3 cm.

### Note on seam allowances:

- If the pattern has double contour the seam allowances are included. They are 1 cm unless specified otherwise.
- If the pattern has single contour, the seam allowances are NOT included and need to be added when laying out the pattern.

### Note on length of fabric:

Attention! The amount of fabric needed for your pattern is not included. It will depend on the selected pattern size, the width, and design of the fabric you plan to use. First, print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm). Measure how much fabric you will need. Don't forget to account for pieces that need to be cut multiple times and pieces that are cut on the fold.

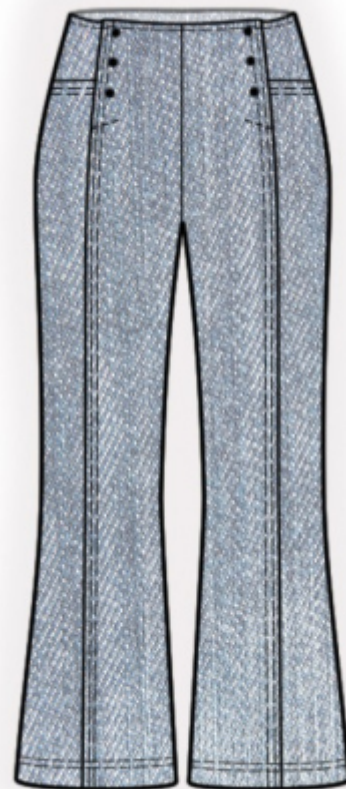

## CUTTING:

### Note on cutting:

On the pattern pieces, "beam" means straight of grain. Lay out your pieces accordingly. Some pieces will be cut on the fold. This is noted on the pattern piece. Mark all notches and other design features such as pleats etc. from the pattern onto your fabric.

When sewing the garment, pay attention to notches, they must match up.

Main fabric:

1. Center front half – cut 2
2. Side front half – cut 2
3. Side – cut 2
4. Back half – cut 2
5. Front center facing – cut 1
6. Side front facing – cut 2
7. Back facing – cut 1

8. Button catch (zipper facing) – cut 2
9. Back pocket – cut 2

Lining:

1. Pocket bag – cut 2

Fusible interfacing:

1. Front center facing – cut 1
2. Side front facing – cut 2
3. Back facing – cut 1
4. Button catch (zipper facing) – cut 2

## INSTRUCTIONS:

1. Apply fusible interfacing to corresponding details, and also to the one-piece facings of center front halves.
2. Sew darts on back halves, press bulk towards center.
3. Fold under the upper seam allowance of back pocket onto the wrong side and press, turn under inside and topstitch. Serge pocket edges, press seam allowances onto wrong side. Pin pocket onto the back half according to markings and topstitch.
4. Pin pocket bag onto front side half right sides together and sew upper edge. Turn pocket bag onto wrong side, straighten, press. Sew a double decorative stitch along the upper edge. Pin front side half onto side, sew lower edge of pocket bags, serge. Baste pieces together along the side edge and the princess seam edge.
5. Serge the princess seam edges on center front part and on side front part. Sew princess seam from fly piece down to hem. Press to середине and sew a double decorative stitch along the seam. Press the one-piece facing for closure onto the wrong side. Serge button catch (zipper facing) around all edges. Press button catch (zipper facing) in half lengthwise right side out. Pin button catch onto side front at the closure area and sew outer side, press seam allowances onto the button catch.
6. Sew side seams, press towards the back and serge. Sew a double decorative stitch along the seam. Sew the inside leg edges of the pants, serge and press. Sew center seam on front halves and on back halves двойной строчкой, press the seam apart and serge.
7. Serge lower edge of center front facing. Fold the one-piece facings for closure onto the right side and sew the short edges of center facing to them, press the seam apart. Sew upper edge of center front. Fold the closure and the facing onto the wrong side, straighten, press. Sew the front side facings to the back facing, press the seam apart, serge lower edge. Pin facing to the upper edge of pants right sides together. Fold the button catches onto the right side and sew the shorter edges of the facing to them. Sew the upper edge and continue to sew the upper corners of the button catch, trim away corners, turn the facing right side out and press. Sew a double decorative stitch along the upper edge. Sew a double decorative stitch line along the edge

of fly piece. Stitch-in-the-ditch the longer seam allowance of the inner side of the button catch into the seam. Place the right side of the closure over the left part, matching the line showing the closure edge when ready, and topstitch the center part onto the button catch with double stitch.

8. Seam allowance for hem serge, press onto wrong side and topstitch with double decorative stitch.

9. Make button holes on center halves of pants, sew on buttons onto the button catches.

## TECHNICAL DRAWING:

